

TECHNICAL DATA SHEET

PC 363XP



MATERIAL DESCRIPTION

PC 363XP coating is a radiation-curable acrylate useful for polymer cladding, especially has no POFA & POFS similar chemicals to meet TSCA regulation. PC 363XP coating has suitable glass transition temperature, rapid cure property, non-yellowing, thermal resistance, high oxidative and hydrolytic (moisture) stability, which are required by optical fiber industry applications.

MATERIAL PROPERTIES

LIQUID

Viscosity at 25°C	6550 cPs±900
Density at 24°C	1.50 - 1.55 g·cm ⁻³
Refractive Index at 25°C	1.358 ± 0.005(589nm)

CURED'

Refractive Index at 852nm	1.363± 0.005
Secant Modulus at 2.5% Strain	1.5 -2.5 kgf/mm2
Tensile Strength at Break	0.35-0.55 kgf/mm2
Elongation at Break	25 - 55 %
Glass Transition Temperature	30 °C at Tan_delta Max
Coefficient of Expansion	On testing
Shrinkage on Cure <4.9 %	

CURING CONDITION

Minimum UV dose of PC 363XP for complete cure is 1000 mJ/cm² under a nitrogen environment. However, the minimum dosage is heavily dependent upon the thickness of the PC layer.

STORAGE CONDITION

PC 363 XP polymer cladding coating can polymerize under improper storage conditions. Store materials away from direct sunlight and presence of oxidizing agents and free radicals. Storage temperature range is between 15°C to 27°C.


PRECAUTION

PC 363 XP polymer cladding coating materials can cause skin and eye irritation after contact. Therefore, avoid direct contact with these materials. If contact occurs, immediately rinse affected areas copiously with water.


** The information contained herein is believed to be reliable but is not to be taken as a representation, warranty or Guarantee. Customers are urged to perform their own process and QC tests.*

PC 363 XP

Viscosity Reference

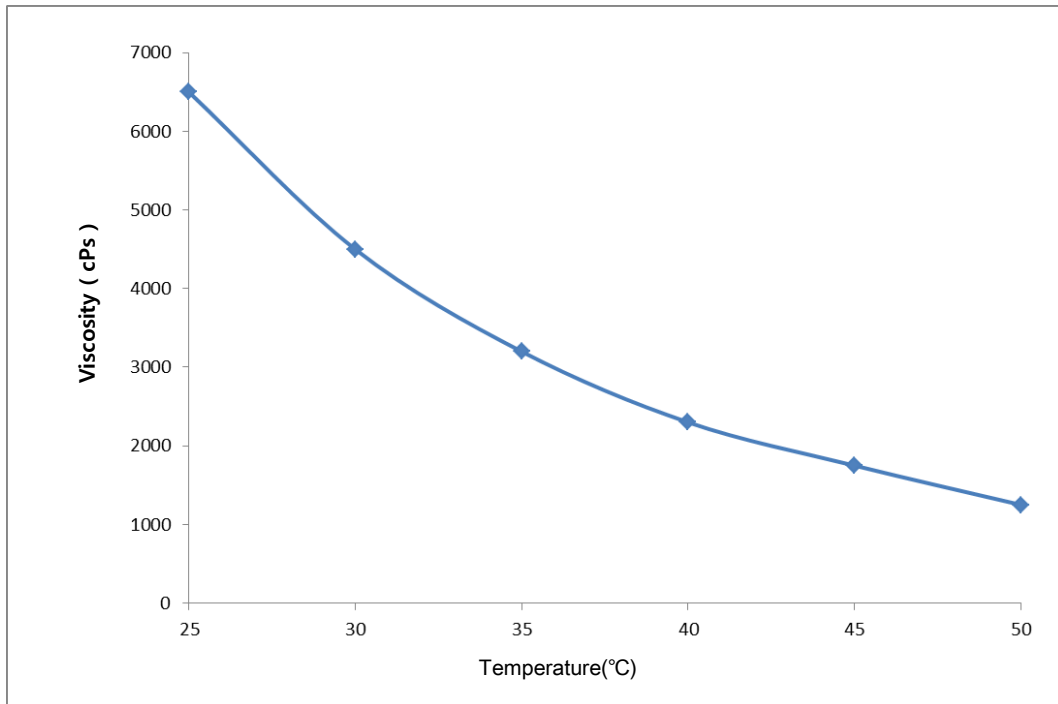

DMTA Analysis Data

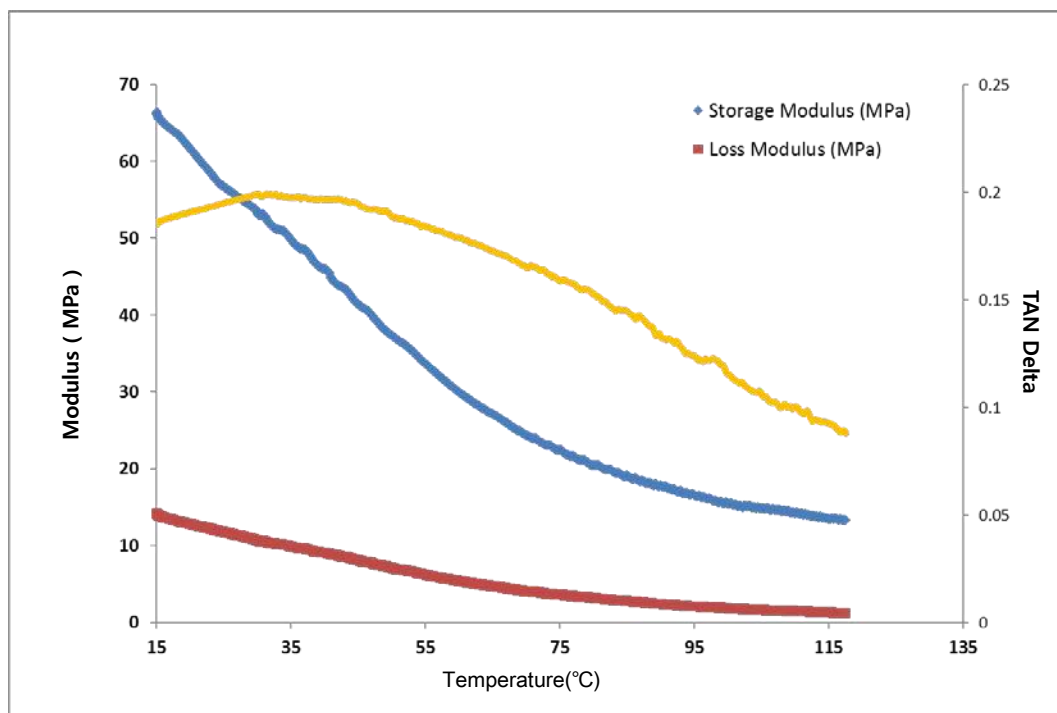

* The information contained herein is believed to be reliable but is not to be taken as a representation, warranty or Guarantee. Customers are urged to perform their own process and QC tests.

Date of Issue: 1st Dec. 2014 / The Term of Validity: 1st Dec. 2014 ~ 30th Nov. 2015

PC 363 XP

APPENDIX

TEST EQUIPMENT

	Test Equipment
Viscosity (cPs)	Brookfield DV II+ or DV III+
Refractive Index (uncured)	Abbe Refractometer
Density (g/cm ³)	Pycometer
Refractive Index (cured)	Prism Coupler / Abbe Refractometer
Shrinkage On Cure	Pycometer
Secant Modulus (kgf/mm ²)	Instron 4443 UTM
Elongation (%)	Instron 4443 UTM
Tensile Strength (kgf/mm ²)	Instron 4443 UTM

TEST METHOD

Viscosity (cPs)	ASTM D-1084 Method B	$V = fs$
V = Viscosity of sample in centipoises f = Scale factor furnished with instrument s = Scale reading of viscometer		
Refractive Index (uncured)	ASTM D 542-50	
Density (g/cm ³)	ASTM 1475	$D = (W - w) / V$
V = Volume of container (mL) W = Weight of the filled container w = Weight of the empty container D = Density (g/mL)		
Shrinkage On Cure	ASTM D-792	$X = (a \times d) / (b + a - m)$ % Shrinkage = $(X - d) / d$
a = Sample Weight d = Specific Gravity of Uncured Sample b = Weight of Pycnometer and water m = Weight of Water and Sample in Pycnometer e = Weight of Pycnometer		
Secant Modulus (kgf/mm ²)	ASTM D-638	
Elongation (%)	ASTM D-638	$(L - L_0) / L_0 \times 100$
L_0 = Length of initial L = Length at break point		
Tensile Strength (kgf/mm ²)	ASTM D-638	$P / (T \times W)$
T = Film Thickness, P = Tensile pull to rupture W = Width of Film		

Contact US

Luvantix SSCP

22 Quail Run, Warren, NJ, USA

Tel: +1 732 271 0350

Fax: +1 732 348 9496

sysuh@sccpusa.com